1. Read Km by SID30x or EMS31xx (Fiat/Renault Tool) OBD-soft prompt You save .XML file

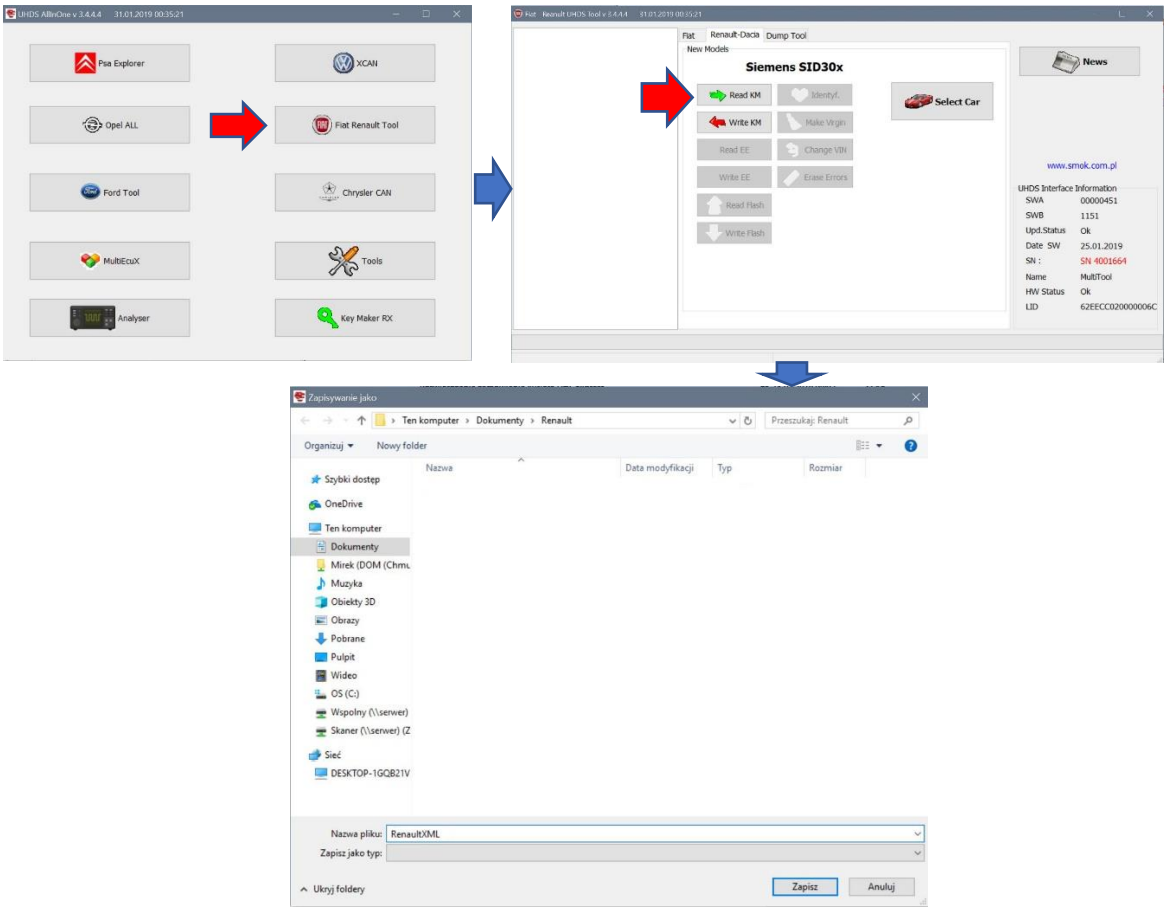

2. Read EEprom OBD SID30x or EMS31xx (ECU-X)

3. Read Password OBD SID30x or EMS31xx (ECU-X)

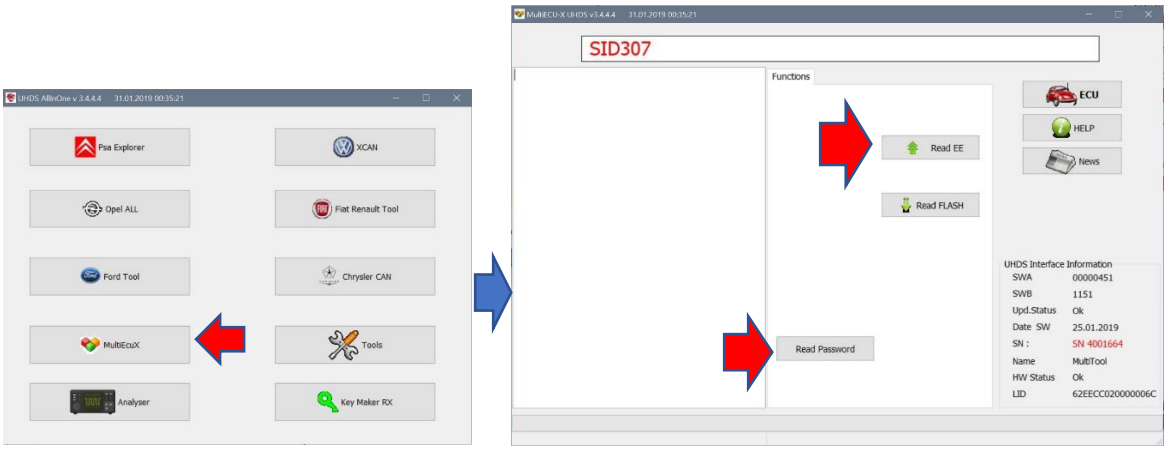

4. Dump Tool SID 30x or EMS31xx Load .XML File

5. Dump Tool SID 30x or EMS31xx Load eeprom File

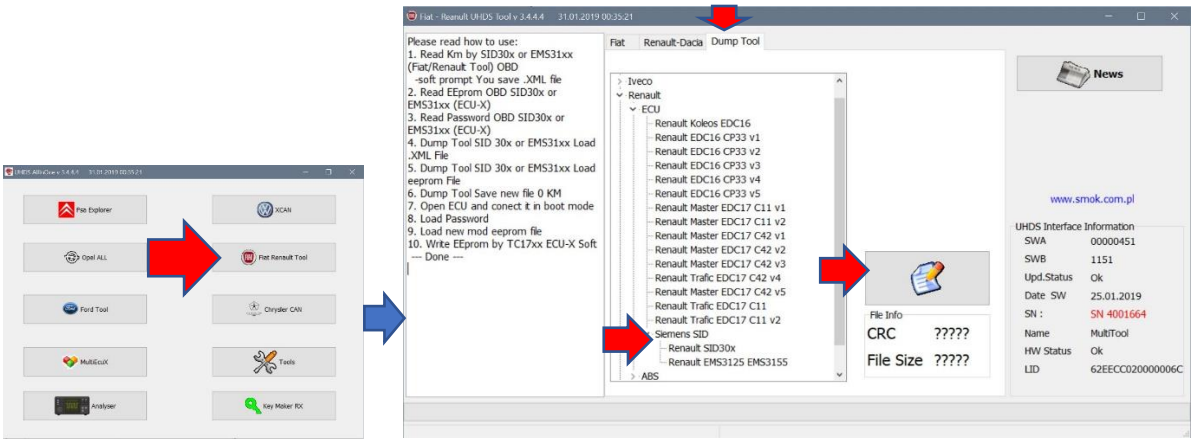

6. Dump Tool Save new file 0 KM

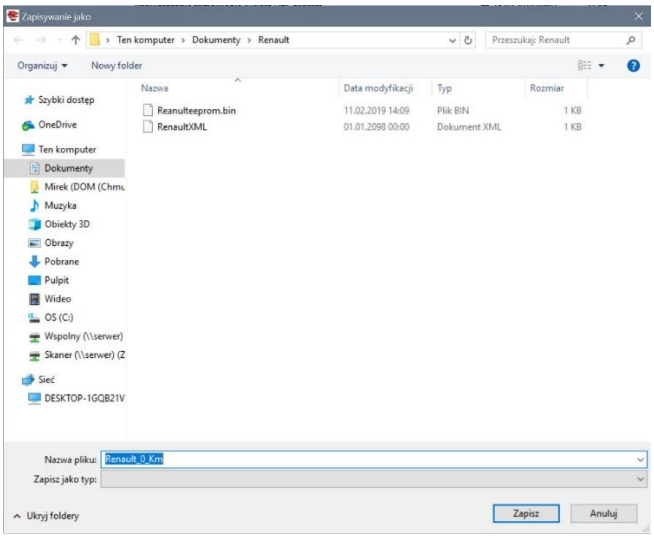

7. Open ECU and conect it in boot mode (picture available in HELP ECU-X/ECU/Renault/ECU/SID)

SID307 TC1767

8. Load Password

9. Write EEprom (0 km) by TC17xx ECU-X Soft

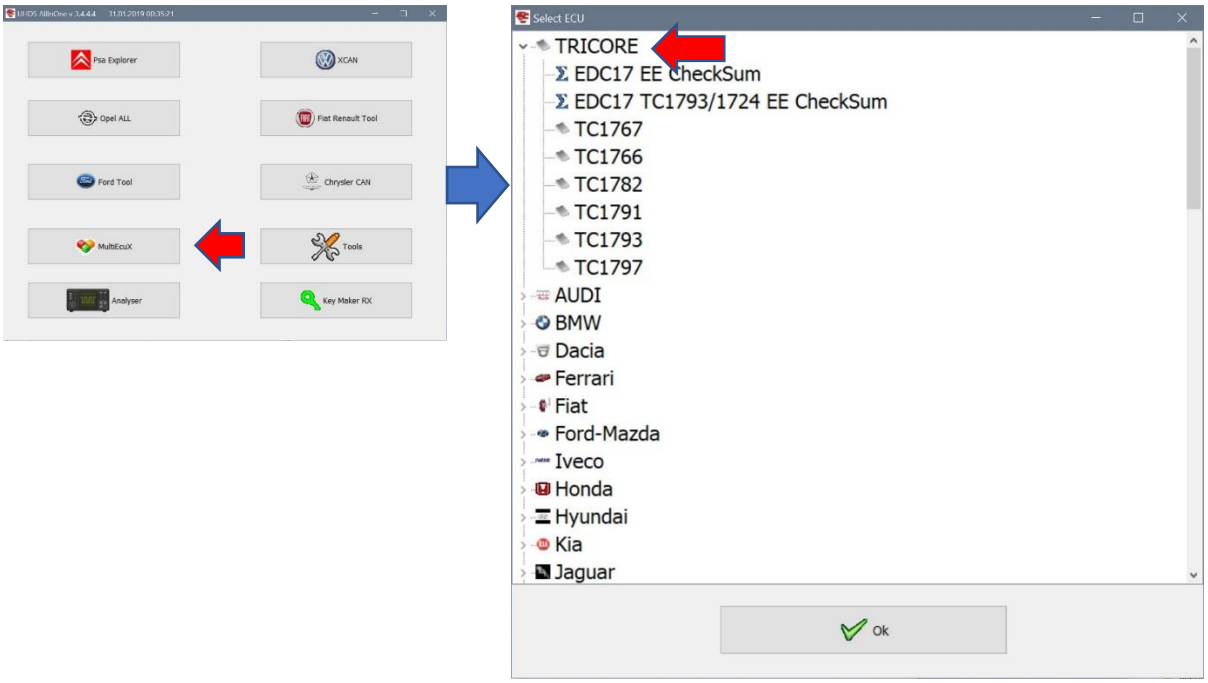
Psa Explorer
XCAN
Opel ALL
Fiat Renault Tool
Ford Tool
Chrysler CAN
MultiEcuX
Tools
Analyser
Key Maker RX
Select ECU
TRICORE
EDC17 EE CheckSum
EDC17 TC1793/1724 EE CheckSum
TC1767
TC1766
TC1782
TC1791
TC1793
TC1797
AUDI
BMW
Dacia
Ferrari
Fiat
Ford-Mazda
Iveco
Honda
Hyundai
Kia
Jaguar
Ok

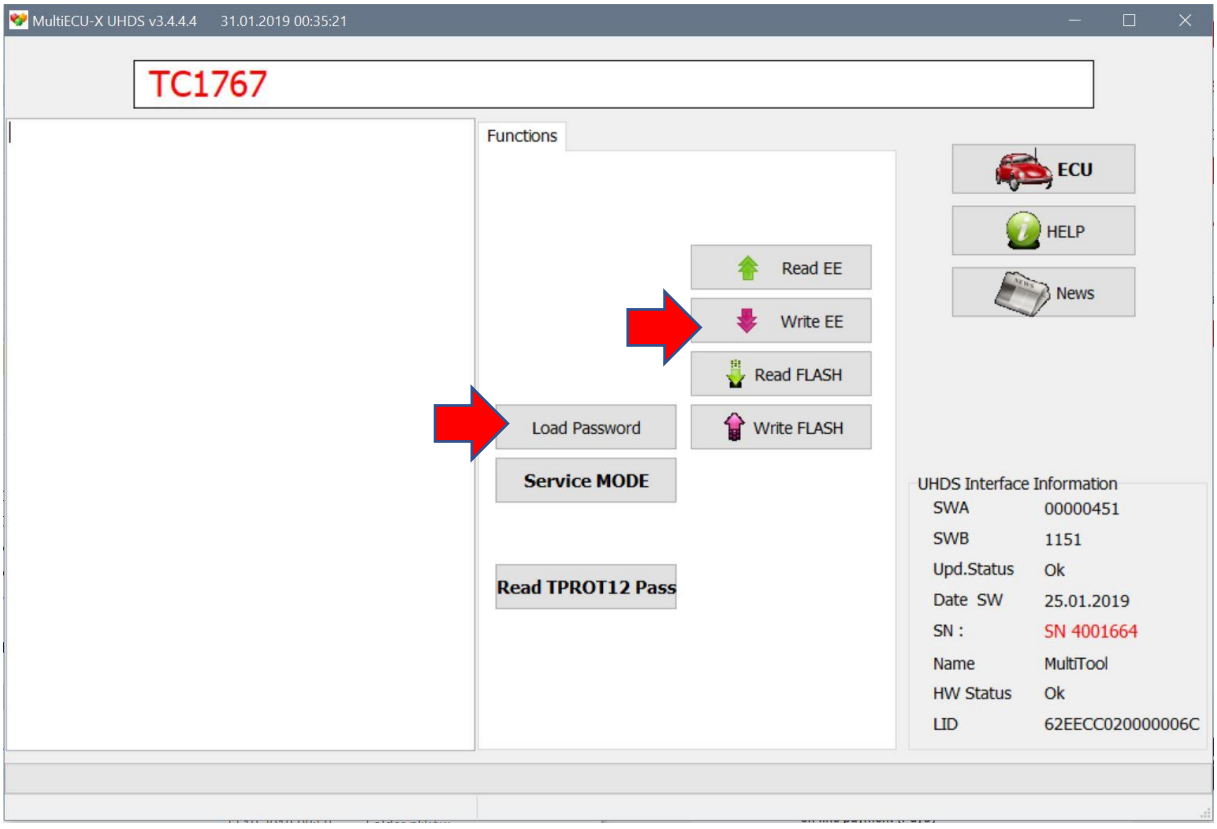
MultiECU-X UHDS v3.4.4.4 31.01.2019 00:35:21
TC1767
Functions
ECU
HELP
News
Read EE
Write EE
Read FLASH
Write FLASH
Load Password
Service MODE
Read TPROT12 Pass
UHDS Interface Information
SWA 00000451
SWB 1151
Upd.Status Ok
Date SW 25.01.2019
SN : SN 4001664
Name MultiTool
HW Status Ok
LID 62EECC020000006C